



Step One:

Attach 12v clamps to battery pack or vehicles battery.



Step Two:

Remove the wheel cover to gain access to lug nuts



Step Three:

Find the correct sized coil for your application



Step Four:

Lock your coil in place by turning the thumb screws



Step Five:

Heat up the lug nut & try to loosen it after a few seconds

