









STEP 1 -Turn the twist-lock to the unlocked position. (For the Mini-Ductor Venom® and HP)\*


\*For the Mini-Ductor II and 12V. make sure the thumb screws are loosened.



STEP 2 -Insert the coil leads into the correct holes.



STEP 3 -Push the leads ALL the way in before locking them in place.

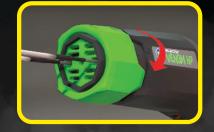

STEP 4 -Turn the twist-lock to the locked position.\*

\*For the Mini-Ductor II and 12V. twist the thumb screws at the same time to secure the coils.

#InductionInnovations

